

Helios Electric Fire

Easy Fitting Instructions



Helpful Advice Before Fitting

1. These instructions are provided in an easy to follow style. Simply follow the instructions in sequence to fit this product.
2. Please retain all packaging until you have checked and counted all the parts and the contents of the fixing pack against the parts list.

In the unlikely event that this product has missing or damaged parts, please call our helpline on 0870 224 2811 or e-mail helpline@adamsurrounds.co.uk for assistance or to obtain spare parts.

Parts List

Please ensure you have all the correct parts before beginning to fit this fire

- a) Heater main body
- b) Decorative Fire frame and Integral Front
- c) White moulded fuel bed
- d) Bag of pebbles
- e) 3 x Neoprene securing strips

Important Notes prior to fitting

- The buyer should not attempt any repairs to the heater unit. In the event of a fault please return the suite to where it was purchased.
- This product has electrical components. Before working on or near any part of the light housing, isolate it from the mains by unplugging the suite
- DO NOT use this appliance immediately below a fixed socket outlet
- DO NOT use this appliance in the immediate vicinity of a bath, shower or swimming pool
- DO NOT allow the heater unit to be covered as this may cause overheating.
- This appliance is supplied with a pre-wired three-pin plug (13 AMP fuse rated) and 1.8 meters of electric cable. It is therefore necessary for a suitable electrical socket to be located within this distance and be easily accessible. Do NOT route the cord directly below the heater unit
- If the cable is damaged it must be replacement by a suitably qualified person
- This appliance is suitable for installation into all proprietary surrounds with an opening of 406mm by 559mm (16" by 22")
- When replacing the bulb ensure that the appliance is disconnected at the mains. To get to the bulb, firstly remove the frame and pebbles, now remove the fuel bed by removing the screw that secures it to the appliance shelf, and then pull it gently towards you.
- There are no specific cleaning requirements other than a regular cleaning of the general appliance; stainless steel areas may be cleaned using a stainless steel cleaner. IMPORTANT - Always clean in the direction of the grain and never across it, as this will scratch the surface.
- The area around the fire should be kept free of animal hair, lint and other extraneous material that may be drawn into the workings of the appliance and could affect its performance.

Appliance Data

- Supply Voltage: 230/240 Vac, 50Hz
- Heating Elements: 2 x 900W / 1000w
- Fuse Rating: 13 Amp
- Lighting: 1 x 40W BC Bulbs

Installing the Appliance

This appliance needs a recess of 60mm, the spacer frame 50mm can be removed and the fire can be totally recessed to a depth of 110mm

To detach the spacer:

Firstly, detach the fret removing the 4 screws in the front, then remove the screws located around the perimeter and inside faces and then re-attach the appliance frame (if required) to give the correct recess depth. It may be installed directly into any proprietary surround, which can house the size rebate without the need to recess the appliance into the wall opening or fabricate a false chimney breast.


Fixing by neoprene strips

In normal installation circumstances, this method of fixing is satisfactory for use with Marble, stone, laminate, or any smooth faced mounting surface.

- Peel off the adhesive backing from one side of each strip and apply to the periphery Of the REAR a of the appliance frame, as shown in Diagram a. (Ensure that the strips are not applied any closer than 5mm from the edge of the frame, attaching the strips closer may present problems when fitting the decorative trim)

- Tear off any excess lengths of strip to form a neat border around the frame.
- Before finally fitting the appliance into its location, remove the remaining strips of adhesive backing, ensuring that the mains cable and plug are properly routed,
- Locate the fire into the opening and press firmly around the edge of the frame to allow the strips to adhere to the back panel of the surround.

Diagram (a)

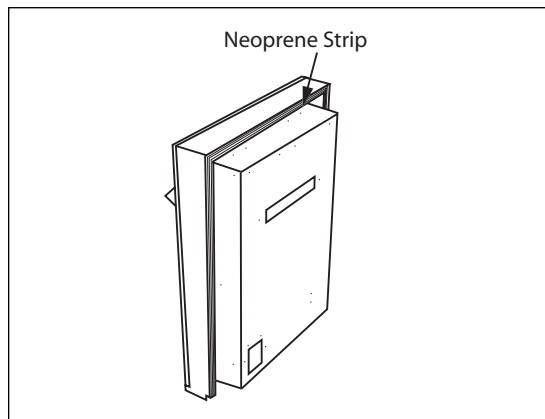

Assembling the fuel bed

- Disconnect the appliance from the mains
- Remove the loose pebbles / coals from their packaging. Place the larger pebbles down behind the front frame bars, then randomly place the remaining pebbles/coins on top of the white fuel bed shelf to create a realistic effect, see (Diagram d)

Diagram (d)



Fitting the decorative Frame and Front

IMPORTANT - Due to the possibility of sharp edges, care should be taken when handling frame components. The use of gloves is recommended.


- Remove frame from box and remove the protective film from the frame.
- Attach the frame to the appliance using the four magnetic pieces provided, on to each corner of the frame.



Operating The Appliance

Firstly check that the fan outlet is not covered or obstructed in any way and ensure that the power to the fire is switched on.

The appliance is controlled using four switches, mounted under the lift up hood. The left switch (O) controls the main power to the fire and switches on the fuel effect, which can be used independently of heat for visual effect only. The second switch (fan icon) operates the fan blower without heat, which can be used in the summer for cool air circulation. The switch marked with a single bar (I) operated the fan heater on the low setting (1kw). The switch marked with two bars (II) operates the fan heater on the high setting (2kw)

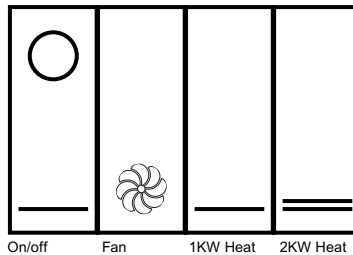

Safety Cut -Out system

This appliance has a safety cut out system fitted, which will activate if the air inlets or outlets are obstructed. For safety reasons the fire will NOT switch back on again automatically. The following procedure must be carried out before the fire can be operated again.

- Switch off the appliance at the wall socket outlet; leave the fire off for a period of no less than 10 minutes ensuring that all obstructions are removed.
- Switch the appliance back on at the wall; ensure that the appliance is turned on at the control switches.
- If the fire fails to operate correctly, repeat the above procedure. If an attempt to switch on the appliance before the safety cut out has reset, the appliance may cutout for a further period of time.
- If this sequence has been followed correctly and the appliance still fails to function, check the plug is correctly in the plug socket.

Please Note -Your electric fire will need PAT testing 12 months from purchase. If you need any further advice or any spare parts for this item, please contact our customer service helpline on the details below.



Helpline telephone number: 0870 224 2811

Helpline email address: helpline@adamsurrounds.co.uk