

www.adamfires.co.uk

These notes must be read before installation

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.

Note: This manual applies for a number of different products. Please make sure you follow the appropriate product guide lines.

CONTENTS

SECTION 01

Care

Specification Guarantee

Contacts

Cautions Introduction Handling Unpacking	03-04 05 05 05
SECTION 02	
Tools required Identification Parts supplied Fixings pack	06 06 06 06
SECTION 03	
Installation Use	07 07

07 08

12 12

CAUTIONS

DO'S

- Always install the stove in accordance with this guide. If in doubt obtain expert advice.
- Always make sure the electrical socket is accessible and located adjacent to, but not above the stove.
- Always disconnect the stove from the electrical supply before carrying out cleaning or maintenance.
- Always assemble the stove in accordance with this guide. If in doubt, obtain expert advice.
- Always ensure the product is assembled in an area that is free from dust, grease or liquids.

DON'TS

- Never leave children unsupervised in a room where the stove is ON and unquarded.
- Never obstruct or cover the fan outlet or force items into fire openings.
- Never install or use the stove anywhere where water is in use, i.e. Bathrooms, Kitchens, Shower Rooms, and Swimming Pool etc.
- Never use aerosols or steam cleaners on or around the stove.
- Never route the mains supply cord under carpet etc.
- Never install the stove close to curtains or combustible materials.
- Never use the stove to dry clothes etc.
- · Never sit or stand on the stove.
- Never lean or put weight on the stove.
- Do not use outdoors.
- Do not position furniture, curtains or other combustible material closer than 1 metre from the heater.
- Do not site the stove on deep pile carpets or rugs.
- Never cut off the plug and hard wire into a fixed fused spur

PLEASE DO NOT OBSTRUCT THE AIR VENTS OF THE ELECTRIC STOVE

This appliance has a 'self resetting' safety cut out system. To prevent overheating, ensure the air inlets and outlets are not obstructed. If the safety cut-out operates, switch off the electric fire and allow to fully cool down. Remove any obstruction before re-use.

IMPORTANT ELECTRICAL SAFETY

The stove must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning. Never cut off the plug and hard wire into a fixed fused spur.

IMPORTANT!

- Do not spray liquids directly onto any surface of the unit.
- This stove must be earthed. The supply cord must be safely routed from the fire to an electrical socket.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have had supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be accessible after installation to allow for isolation in an emergency.



Warning: In order to avoid overheating, **DO NOT COVER THE HEATER**

Note: Any new wiring required, must be In accordance with local and national codes and other applicable regulations in order to reduce the risk of fire, electric shock, or other injuries.

Note: When the stove is turned on for the first time or when it has not been used for some time, it may release a slight, harmless odour. This odour is a normal occurrence caused by the initial heating of the internal heating elements and will disappear with use

INTRODUCTION

Thank you for choosing this Electric Stove. The product is designed to meet the most stringent quality, performance, and safety requirements. This guide aims to improve your understanding and appreciation of your new product by providing simple and informative assembly instructions.

HANDLING

Before continuing any further with the installation of this stove please read the following:

- When lifting always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper body / top heavy bending. Always bend from the knees rather than the waist.
- Do not lean forward or sideways whilst handling the fire.
- Always grip with the palm of the hand. Do not use the tips of fingers for support.
- Always keep the product as close to the body as possible. This will prevent unnecessary and undue strain on the body.
- Use gloves to provide additional grip.
- Always use assistance if required.

UNPACKING

The unit is supplied in a single package carton. Carefully unpack the product using the following procedure:


- Carefully lift the stove out of the box
- Carefully remove the protective packaging and bag from the stove
- Carefully remove the protective film covering the stove

TOOLS REQUIRED

No tools are required for the installation of this product.

IDENTIFICATION

(Image for illustrative purposes only)

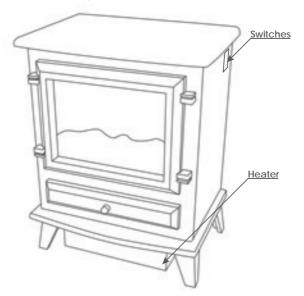

PARTS SUPPLIED

This product comes as one fully assembled unit.

(if you require spares or replacement parts for your product please see the contact details on the last page of this manual)

FIXINGS PACK


No fixings pack is required for the installation of this product

INSTALLATION

Please ensure the wall and floor are flat before installing this stove into a surround or hearth

USE

The appliance is controlled using 4 switches, located on the side of the stove. Use the following sequence to operate. The grey represents a 'pressed switch.' A switch is in the ON position when the side with the markings on (e.g. I or II) is 'pressed in'.

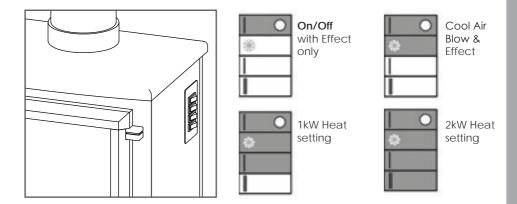

CARE

- The stove can be cleaned using a damp cloth.
- If the supply cord is damaged, it must be replaced by a suitably qualified person.
- The area around the stove should be kept free from animal hair, lint and other extraneous material that may be drawn into the workings of the appliance which could affect its performance.

PLUG REPLACEMENT

(for Product fitted with BS plug)


This appliance is supplied with a BS1363 3 pin plug fitted with a 13 Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at **13 Amp** and approved to BS1362.

In the event the mains plug has to be removed/replaced for any reason, please note:

The wires in the mains lead on this appliance are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral Brown - Live

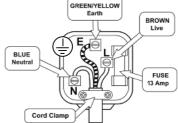

THIS APPLIANCE MUST BE EARTHED

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

- The green and yellow earth wire must be connected to terminal in the plug which is marked with the letter E or with the earth symbol
- The blue wire must be connected to the terminal marked N
- The brown wire must be connected to the terminal marked L

Important - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.

SPECIFICATION

Supply Voltage	-	220-240V~50Hz
Rated Power	-	2000W
Fuse Rating	-	13 Amp
Lighting	-	5W LED Array (non serviceable)
Class	-	1
Dimensions (cm)	-	H54.6 x W41.0 x D31.0
Weight	-	14.5kg

CONFORMITY WITH DIRECTIVES

Conforms with relevant European Directives

ENVIRONMENTAL PROTECTION

• (WEEE) Waste Electrical and Electronic Equipment

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

 This appliance complies with the RoHS directive which restricts the use of certain hazardous substances in electrical and electronic equipment.
 This directive bans the placing on the EU market of new electrical and electronic equipment containing more than agreed levels of lead, cadmium, mercury, exavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.



AFFIX RECEIPT OR PROOF OF PURCHASE HERE

GUARANTFF

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. We recommend that you attach your receipt to this documentation.

Your product carries a 12 month guarantee from the date that the original purchaser receives it. If your product fails to operate to its specification due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine whether to offer a repair or provide a replacement. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof or purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies the product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.

CUSTOMER HELPLINE



08448 809 301



customer.support@firedupgroup.co.uk



Fired Up Corporation Ltd. Fired Up Buildings St Thomas Road Huddersfield HD1 3LF United Kingdom

www.firedupgroup.co.uk