

This product is only suitable for well-insulated spaces or occasional use.

Model Number	LJSF4007E-S
Power Supply	220-240 V ~ 50 HZ
Power Consumption	2000 W

IMPORTANT SAFETY CAUTIONS

- This manual is used for many different products. Please make sure you follow the appropriate product guide lines. Please refer to the front page for reference.
- These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.
- The fan will run for approximately 30 seconds after the heater is turned off. This is to remove any residual heat from the fire to prevent any potential overheating.

DO'S

- Before use, check the voltage information on the rating plate and only connect the device to sockets that correspond to the nominal voltage of the device.
- If the power cord is damaged, have it replaced by a trained professional.
- Keep a distance of one metre from combustible materials such as furniture, curtains or similar.
- The appliance is intended for use in the home and similar environments only. It is not intended for commercial use.
- Repairs may only be carried out by trained specialists.
- Incorrectly or independently performed repairs pose a risk of injury.
- Make sure that the power cord does not come into contact with sharp edges or hot surfaces.

DONT'S

- Do not place the fireplace directly under the mains socket.
- Use the appliance out of the reach of children. Children may only operate the device under supervision.
- Do not use the device if it malfunctions or has been damaged in any way.
- Do not run the power cord under carpets or rugs.
- To prevent overheating, do not cover the fireplace.
- Do not use the appliance with an external timer, a remote-controlled socket or any other device that automatically turns the fireplace on and off.
- Do not immerse the device in water or other liquids.
- Do not use the appliance near bathtubs, showers or swimming pools.
- Do not use the device outdoors.
- Do not use the device with wet hands.
- Do not use the appliance on or near hot surfaces.
- Only use accessories that are expressly approved for this purpose by the manufacturer.

 
• **WARNING:** In order to avoid overheating, **DO NOT COVER THE HEATER.**

• **CAUTION:** Risk of Burns! Some parts of the appliance can become very hot. Be careful not to burn yourself or your children with it.

CLEANING AND MAINTENANCE


- Always switch off the appliance and remove the plug from the socket before cleaning. Wait until the appliance has cooled down completely before cleaning it.
- Dust the unit regularly with a dry cloth. Make sure that the ventilation grilles are free from dust.
- Do not use any harsh cleaning agents or abrasives.
- If the power cord is damaged, it must be replaced by customer service or a qualified electrician.

REMOTE CONTROL

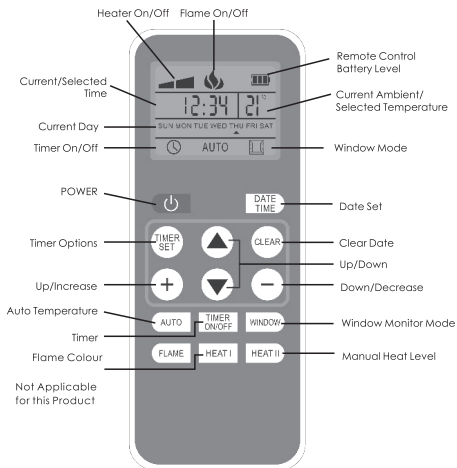

Timer period on - Displays when a timer period is active.

 TOUCH PANEL

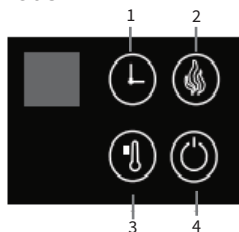

(1) Timer

Press the Timer button repeatedly to select the desired duration: 30 min, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H.
Important: After setting the timer, you must press the HEAT button to start heating.

(2) Flame

Controls flame and log brightness.
Short press cycles through: High (F3), Medium (F2), Low (F1), Off
Cycle repeats after Off.

(3) Heat

Press to control heating:
First press: Start heating
Second press: Stop heating
Modes: HEAT I: 1000W, HEAT II: 2000W
Note: Fan stops 30 seconds after heating turns off.

(4) Power

Turn the appliance ON/OFF

REMOTE CONTROL OPERATION

NOTE:

- Weekly timer and window-open functions can only be set using the remote.
- If remote settings differ from the touch panel, the appliance will follow the remote settings.
- When not in use, the remote displays the current room temperature.
- For best performance, aim the remote at the fireplace's touch panel. Press buttons slowly and allow time for the unit to respond.
- The set temperature must be higher than the room temperature for heating to activate.

FLAME BRIGHTNESS

- Press the FLAME button to adjust flame brightness. Default brightness at startup is High.

HEATING MODE

- Press the HEAT I button to select the 1000W heat setting. Press it again to stop heating. To select the 2000W heat setting, press the HEAT II button. Press HEAT II again to stop heating.

AUTO HEATING MODE

- Press AUTO to enable temperature control.
- Use + to increase and - to decrease the set temperature (range: 15°C–30°C).
- Press HEAT I or HEAT II to activate Auto Heating Mode. The heater will turn on or off automatically based on the set temperature.

SET CURRENT DATE AND TIME

- Press the **DATE/TIME** button on the remote control. The day of the week indicator with flash. Use the up and down to set the desired day of the week. Press the **DATE/TIME** button to confirm.
- As soon as the day of the week has been selected, the hour display will start flashing. Use the + or - buttons to set the current hour. Finally, press the **DATE/TIME** button to confirm.
- As soon as you have set the hour, the minute display will start flashing. Use the + or - buttons to set the current minute. Finally, press the **DATE/TIME** button to confirm.

SETTING THE TIMER

- Press the **TIMER SET** button on the remote control. The digits of the timer will flash.
- Use the + or - buttons to select the desired timer cycle.
- Press the **TIMER SET** button to confirm. A small black triangle will flash under the day of the week, indicating that the setting for the day of the week is being made.
- Press the **CLEAR** button to clear the timer.

SELECT DAY

- Use the up and down buttons to set the desired day of the week from "SUN" to "SAT". The factory-set day is "SUN" (Sunday). Press the + button to confirm the set day. Press the **TIMER SET** button to confirm.

- Repeat step 1 to add other days to the selected timer cycle or press the - button to delete the selected day. Press the **TIMER SET** button to confirm.

SETTING THE SWITCH-ON TIME OF THE TIMER

The "ON" symbol will light up on the LCD screen to indicate that the timer switch-on time needs to be set.

- Press the + or - buttons to set the hour and press the **TIMER SET** button to confirm.
- Press the + or - buttons to set the minute and press the **TIMER SET** button to confirm. The "ON" symbol will go out and the "OFF" symbol will light up on the screen.

SETTING THE SWITCH-OFF TIME OF THE TIMER

The "OFF" symbol will light up on the LCD screen, indicating that the timer off time needs to be set.

- Press the + or - buttons to set the hour and press the **TIMER SET** button to confirm.
- Press the + or - buttons to set the minute and press the **TIMER SET** button to confirm.

SETTING THE DESIRED TEMPERATURE

When the on and off times of the timer have been set, the temp display on the LCD screen will start flashing.

- Press the + or - buttons to set the desired temperature (between 15°C and 30°C). The factory preset temperature is 20°C.
- Press the **AUTO** button and the **TIMER ON/OFF** button to activate the heating timer.

NOTE: Repeat the above steps if multiple timer cycles are to be set.

Open window detection - If this function is switched on, the unit detects when the room temperature. The heating indicator will flash as a reminder that windows and doors must be closed. If this does not happen, the appliance will automatically stop heating.

- To activate and deactivate the function, press the **WINDOW** button.



SAFETY SHUT-OFF SYSTEM

This unit has a safety shut-off system that resets itself. This is activated when the air inlets or outlets are blocked. If the ventilation openings are blocked, the unit will overheat. If the temperature exceeds 85°C, the heating element will be automatically switch off until a safe temperature is reached again. If the safety shut-off system has been triggered, the heater cannot be used. If this is the case, you can reset the unit as follows:

- Switch off the device.
- Unplug the power cord from the wall socket and leave the device unplugged for at least 10 mins.
- Make sure that the ventilation openings are not blocked.
- Plug the power plug back into the wall socket and switch the device back on.
- If the unit is not working, check the fuse in the plug.
- If the fuse in the plug is OK but the unit is still not working, consult a qualified professional.

Problem	Corrective Action
The unit does not turn on	Make sure the power switch is in the "I" (On) position. Replace the fuse in the mains plug.
The pebbles glow, but the flame effect does not work.	Check that the drive motor is working. Contact customer service if this is not the case.
The heating does not work, although the appliance and the heating function are switched on.	Switch off the device and pull the power plug out of the socket for 5 minutes. After 5 minutes, plug the mains plug in again and use the appliance as usual.
The fireplace makes loud noises.	When the flame effect is used, this causes a certain noise level. The sound is produced by a motor that generates the flame effect. This sound can be heard when there is no other background noise. This is due to the required air flow cut off.
E1 on Display	Connection Between NTC and PCB board is loose. Contact with qualified service person
E2 on Display	The NTC fault. Contact with qualified service person.
E8 on Display	Connection Between the control panel and main PCB board is loose. Contact with qualified service.

  FIXING ELECTRIC FIRE SUITE TO A WALL

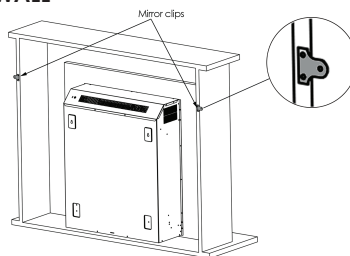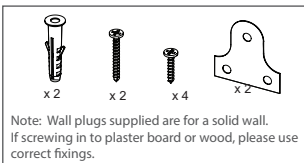

TECHNICAL PARAMETERS

Model identifier(s):		LJSF4007E-S					
Item	Symbol	Value	Unit		Item		Unit
Heat output				Type of heat input, for electric storage local space heaters only			
Nominal heat output	P _{nom}	2.0	kW	manual heat charge control, with integrated thermostat			no
Minimum heat output (indicative)	P _{min}	1.0	kW	manual heat charge control with room and/or outdoor temperature feedback			no
Maximum continuous heat output	P _{max,c}	2.0	kW	electronic heat charge control with room and/or outdoor temperature feedback			yes
Auxiliary electricity consumption				fan assisted heat output			
At nominal heat output	eI _{max}	2.05	kW	Type of heat output/room temperature control			
At minimum heat output	eI _{min}	1.05	kW	single stage heat output and no room temperature control			no
In standby mode	eI _{sb}	N/A	W	Two or more manual stages, no room temperature control			no
				with mechanic thermostat room temperature control			no
				with electronic room temperature control			yes
				electronic room temperature control plus day timer			yes
				electronic room temperature control plus week timer			yes
				Other control options			
				room temperature control, with presence detection			no
				room temperature control, with open window detection			yes
				with distance control option			no
				with adaptive start control			yes
				with working time limitation			no
with black bulb sensor			no				

ENVIRONMENTAL PROTECTION

For electrical products sold within the European Community.



This appliance is labeled in accordance with European Directive 2002/96/EC concerning Waste Electrical and Electronic Equipment (WEEE). Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

GUARANTEE

Please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document.

Your product carries a 2 year guarantee from the date that the original purchaser receives it. If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof of purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed.

This product guarantee does not affect your statutory rights.



03300 882 069

www.firedupcorporation.com

customer.support@firedupcorporation.com

Fired Up Corporation Ltd

UK: HD1 3LF

EU: 71, D02 P593, Dublin

CN: Nantou, 528427, Zhongshan