




INSTALLATION

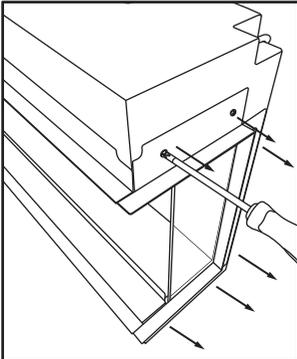


1. Remove 6 x screws from the side of the fire
IMPORTANT: Keep the screws to one side to fit the side panel

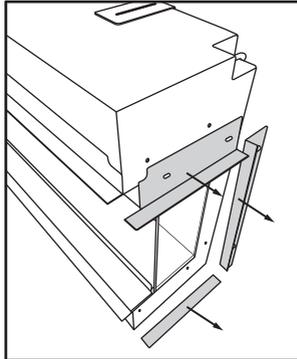


2. Remove the flanges

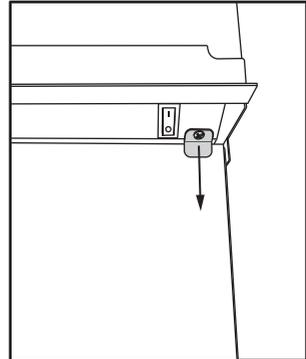


3. Remove the screw from both brackets on the front of the fire to remove the front glass.

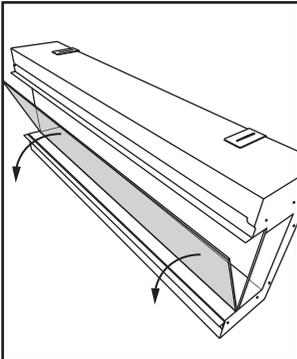


4. Carefully tilt the front glass forward and lift to remove.

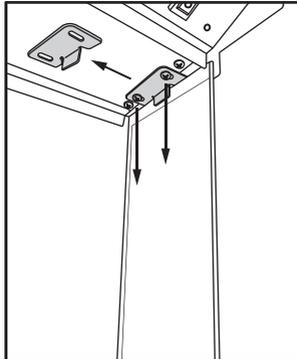


5. Remove the 2 x screws from the bracket holding the side glass in place.

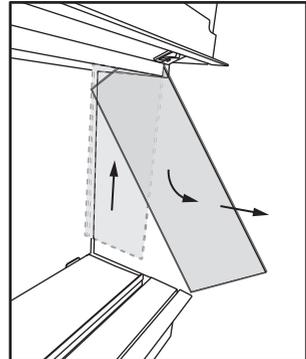

6. Carefully lift and tilt the side glass and remove.

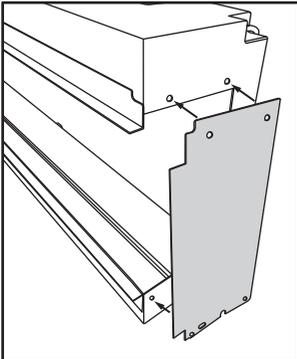

7. Position the side panel so the holes line up with the holes on the side of the fire.

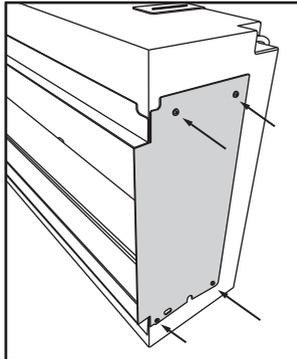

8. Replace 4 x screws into the holes in the side of the fire to fix side panel.

TOOLS REQUIRED

- Crosshead screw driver