

1. Fix the metal plate to the back of the fireplace as shown using the 4 x small screws supplied. (It is recommended to drill a 2mm pilot hole to prevent the wood splitting.)
2. Position the fireplace to the wall and mark through the 2 remaining holes.
3. Remove the fireplace then drill 6mm diameter holes approximately 35mm deep. Insert the wall plugs.
4. Position the fireplace to the wall then screw through the plates in to the wall using the 2 x large screws provided.



www.firedupcorporation.com

Fired Up Corporation Ltd.
Fired Up Buildings
St Thomas Road
Huddersfield
HD1 3LF
United Kingdom

SURROUND INSTALLATION

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.

This fireplace is floor-standing and for extra security, it can be fixed to a wall. Please ensure both the wall and floor are flat before installation. Always ensure there is enough room to place it.


Please ensure that there is an accessible electrical socket within reach of the supply cord.

Check the wall does not have any wiring or pipe work behind where you intend to drill.

For use with wood surrounds only. Do not use with marble or stone surrounds.

Note: This manual applies for a number of different products.

Fixing kit supplied:

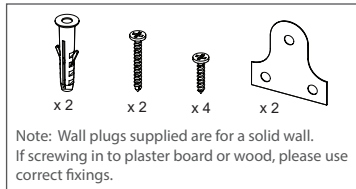

CUSTOMER HELPLINE

☎ 03300 882 069

@ customer.support@firedupcorporation.com